
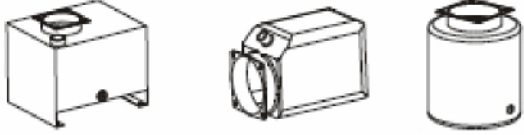


Öltanks

5.5: Return line pressure compensated fixed flow control valves for cavities 5 / 6 / 7 / 8: 				
Please specify for each cavity the required nominal flow control adjustment: (l/min). Effective flow can be different depending on working conditions. See tables U040.20.05 and U040.20.06.				
PPC code	Description	Spare valve code	Max flow (l/min)/ pressure (bar)	Mounting cavity
0 / 1 / 2 / 3 / 4 / 5 / 6 / 8 / 10 / 12 / 15	BSPP 1/4"	VSC01*	15 / 250	5 - 6 - 8
0 / 1 / 2 / 3 / 4 / 5 / 6 / 8 / 10 / 12 / 15	Ø12,7 with o-ring	VSC04**	15 / 250	7
X	No flow control	-	-	-
6: Oil tanks (See section U040.50) 				
Choose tank volume, type and mounting style.				
PPC code	Description	Spare tank code, inclusive of plugs and filler/breather		
Steel tanks				
1,5A / 1,5AV	1,5l, cylindrical, horizontal / vertical mounting	E60303001		
2,5A / 2,5AV	2,5l, cylindrical, horizontal / vertical mounting	E60303004		
5B / 5BV	5l, cylindrical, horizontal / vertical mounting	E60303006		
10B / 10BV	10l, cylindrical, horizontal / vertical mounting	E60303011		
12B / 12BV	12l, cylindrical, horizontal / vertical mounting	E60303012		
10C / 10CV	10l, square, horizontal / vertical mounting	E60303042		
22C / 22CV	22l, square, horizontal / vertical mounting	E60303044		
8EV	8l, square, vertical mounting	E60303041		
15EV	15l, square, vertical mounting	E60303014		
20EV	20l, square, vertical mounting	E60303015		
30EV	30l, square, vertical mounting	E60303048		
Plastic tanks				
1,5L / 1,5LV	1,5l, square 170x140, horizontal / vertical mounting	H60303016		
3L / 3LV	3l, square 170x140, horizontal / vertical mounting	H60303018		
6L / 6LV	6l, square 170x140, horizontal / vertical mounting	H60303020		
5M / 5MV	5l, square 170x170, horizontal / vertical mounting	H60303025		
8M / 8MV	8l, square 170x170, horizontal / vertical mounting	H60303033		
6N / 6NV	6l, square 180x180, horizontal / vertical mounting	H60303026		
12N / 12NV	12l, square 180x180, horizontal / vertical mounting	H60303036		
Filler / breather port and drain plug, graduated oil level (20EV, 30EV square steel tanks only), standard suction filter, inlet pipe, outlet pipe, stainless steel clamp, depending on code, are included in the standard assembly when ordering assembled PPC. When ordering spare tanks, only basic plugs and filler / breather and graduated oil level (20EV, 30EV tanks only) are included; fixing kits, piping and filters are to be ordered separately. When choosing units without tank, specify X in PPC code. In this case the inlet - outlet piping kit and filter are not supplied. A steel tank adapter to be welded on custom made reservoirs can be supplied; in this case specify code F80000001 in place of tank code.				